

Welcome to the new dimension in Television Entertainment: Video CD.

Philips — **the inventor of the audio CD** — brings you the next generation of compact disc entertainment: the Video CD.

Now you can enjoy your favourite movies with the same digital clarity, durability and stereo quality that you expect from your CD's. No need to worry about tape wear, picture loss, or even rewinding your cassette. Video CD is the next level of sophisticated, home video entertainment — with all the convenience of a 5" compact disc.

How to play your Video CD Disc.

If you have a Video CD player or any other playback system compatible with the

Video CD™ standard, please consult your player manual for any special features.

If you are playing this disc on a CD-I player equipped with a Digital Video cartridge, you can enjoy a whole new dimension of filmed entertainment — where you are in control!

In fact, Video CD on CD-I gives you a whole range of on-screen controls. Just press any Action Button and an easy-to-use control panel will appear on the bottom of your screen.

Now you can:

- Use the on-screen table of contents to select any sequence in a video.
- Pause on any frame, reverse, or fast forward to the next scene.
- Hit the brakes on any exciting action, and go forward or back in slow motion.
- Skip back to the table of contents to choose a different segment, or browse through the "programme notes" full of intriguing information about your favourite stars.

Video CD: truly the next dimension in home video entertainment!

On-screen Controls

- To display the on-screen controls, press any action button on your remote.
- To activate an on-screen button, move your cursor over the control. It will highlight. Press Action Button 1 (•) to activate the highlighted control.
- To remove the on-screen controls, Press Action Button 2 (••).


Main Control Bar



Settings: set autoplay, scan time, audio channel, position-video screen.
Scroll Up: if available, see previous menscreen.
Scroll Down: if available, see next menscreen.

Play All: plays all sequences in order.
Scan: plays the first part of all sequences.
Exit: ends the application.

Play/Slow Motion Control Bar

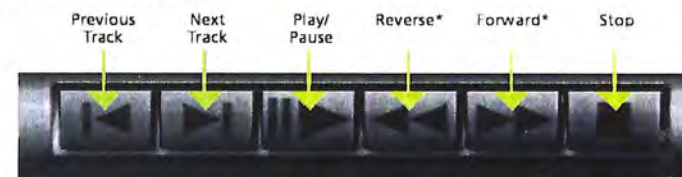

Previous Track: go to previous sequence.
Next Track: go to next sequence.
Play/Pause: play/pause the current sequence.

Reverse: slow from pause mode, fast from play mode.
Forward: slow from pause mode, fast from play mode.
Stop: end sequence and go to main menu.
*Keep the action button pressed to increase the speed.